



**QUICKSET TIMBER WEATHER BOARD PERIMETER DETAIL**  
**WITH NO UNDERSLAB INSULATION**

DETAIL 02

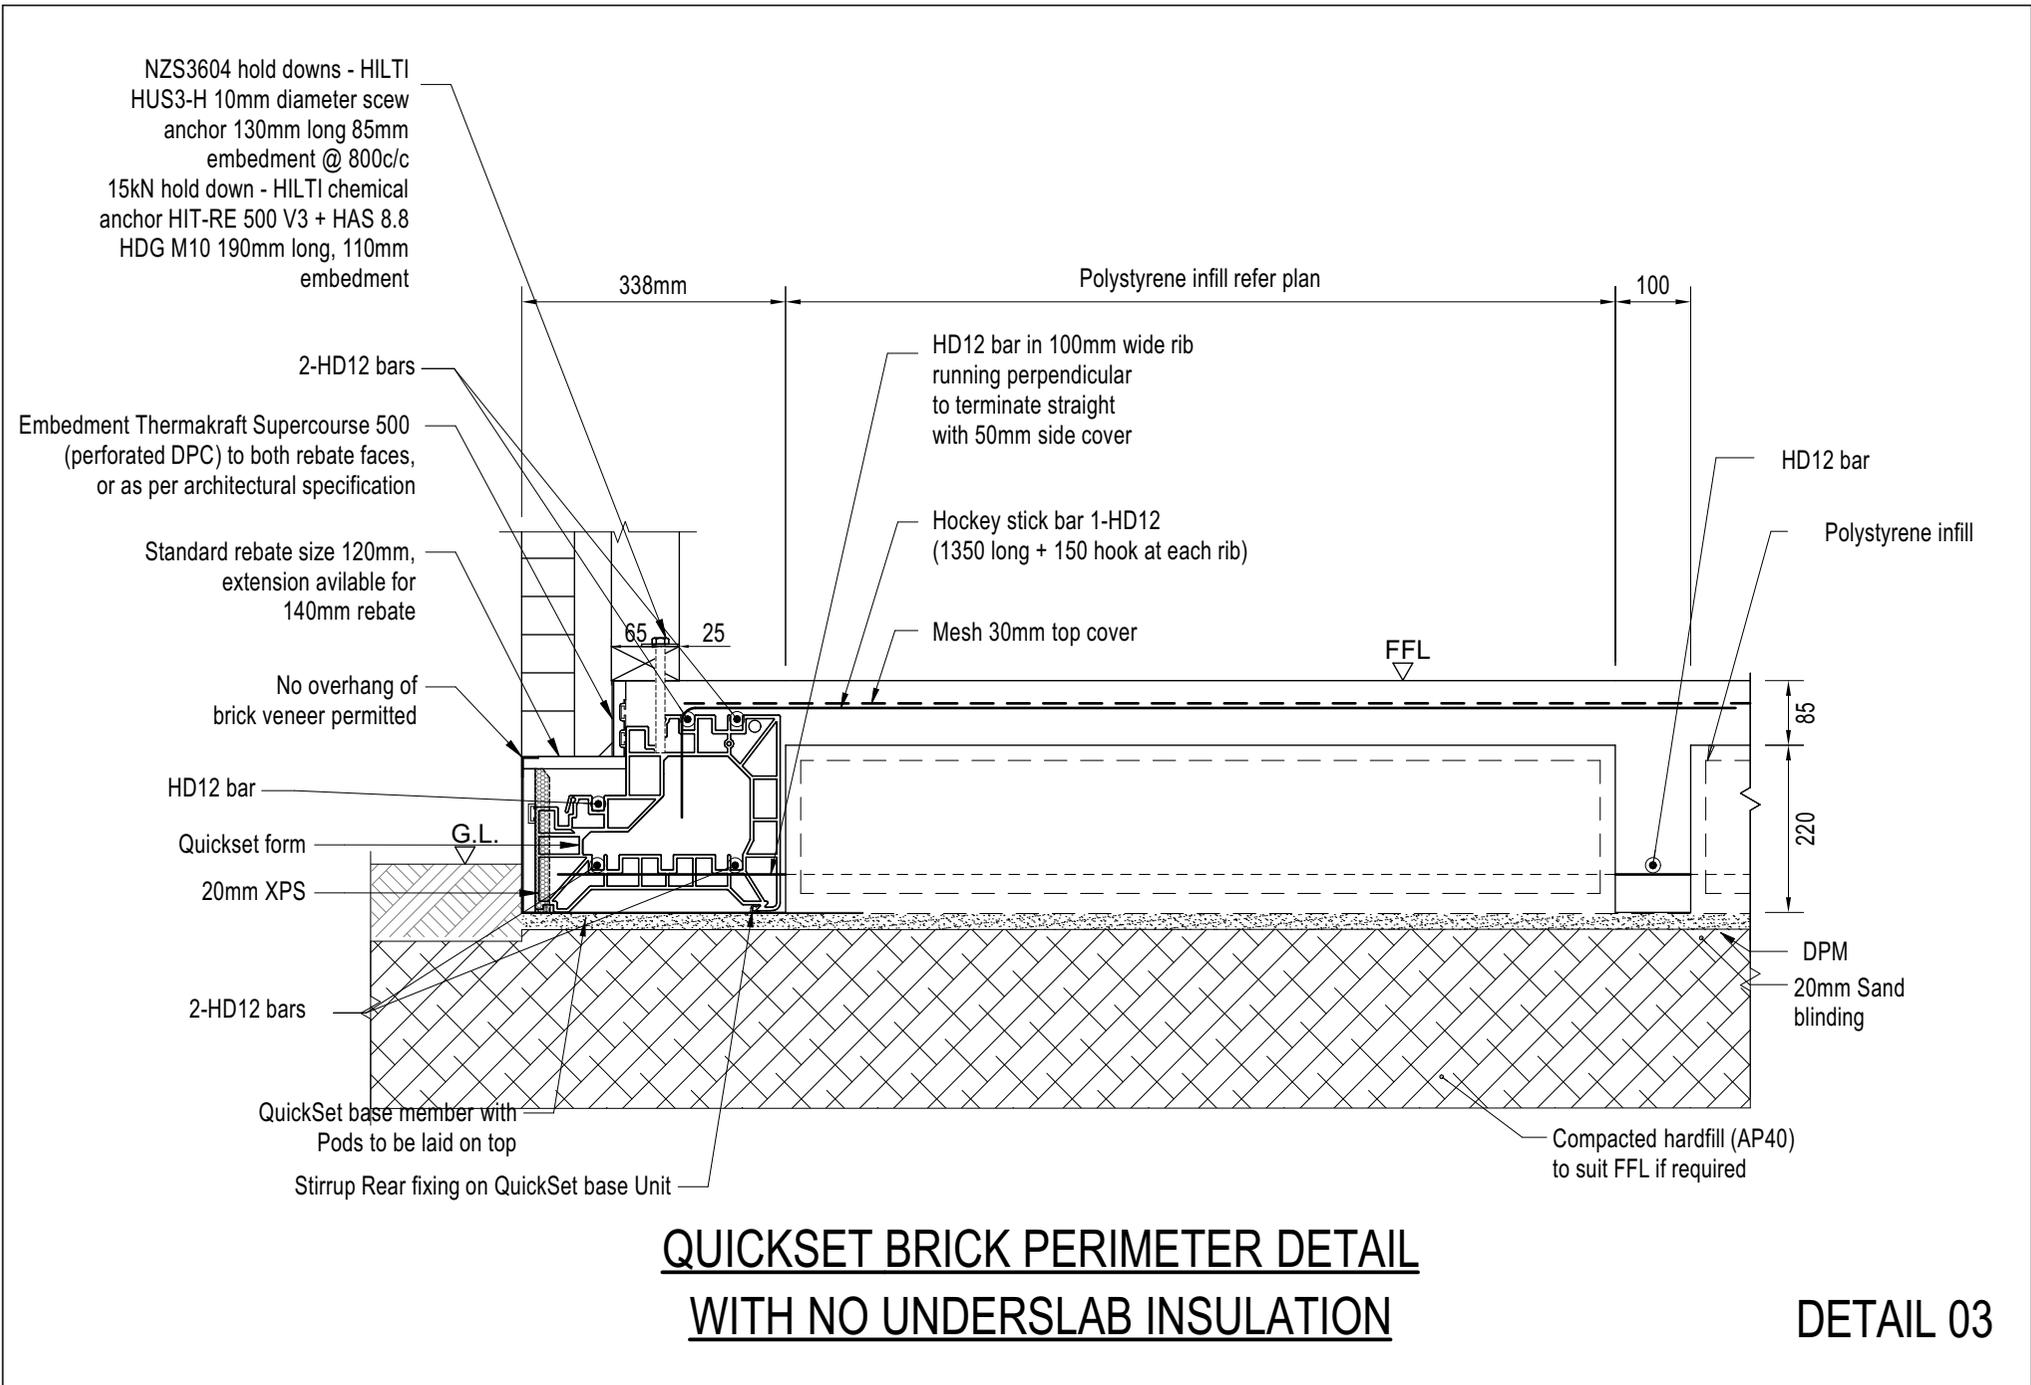


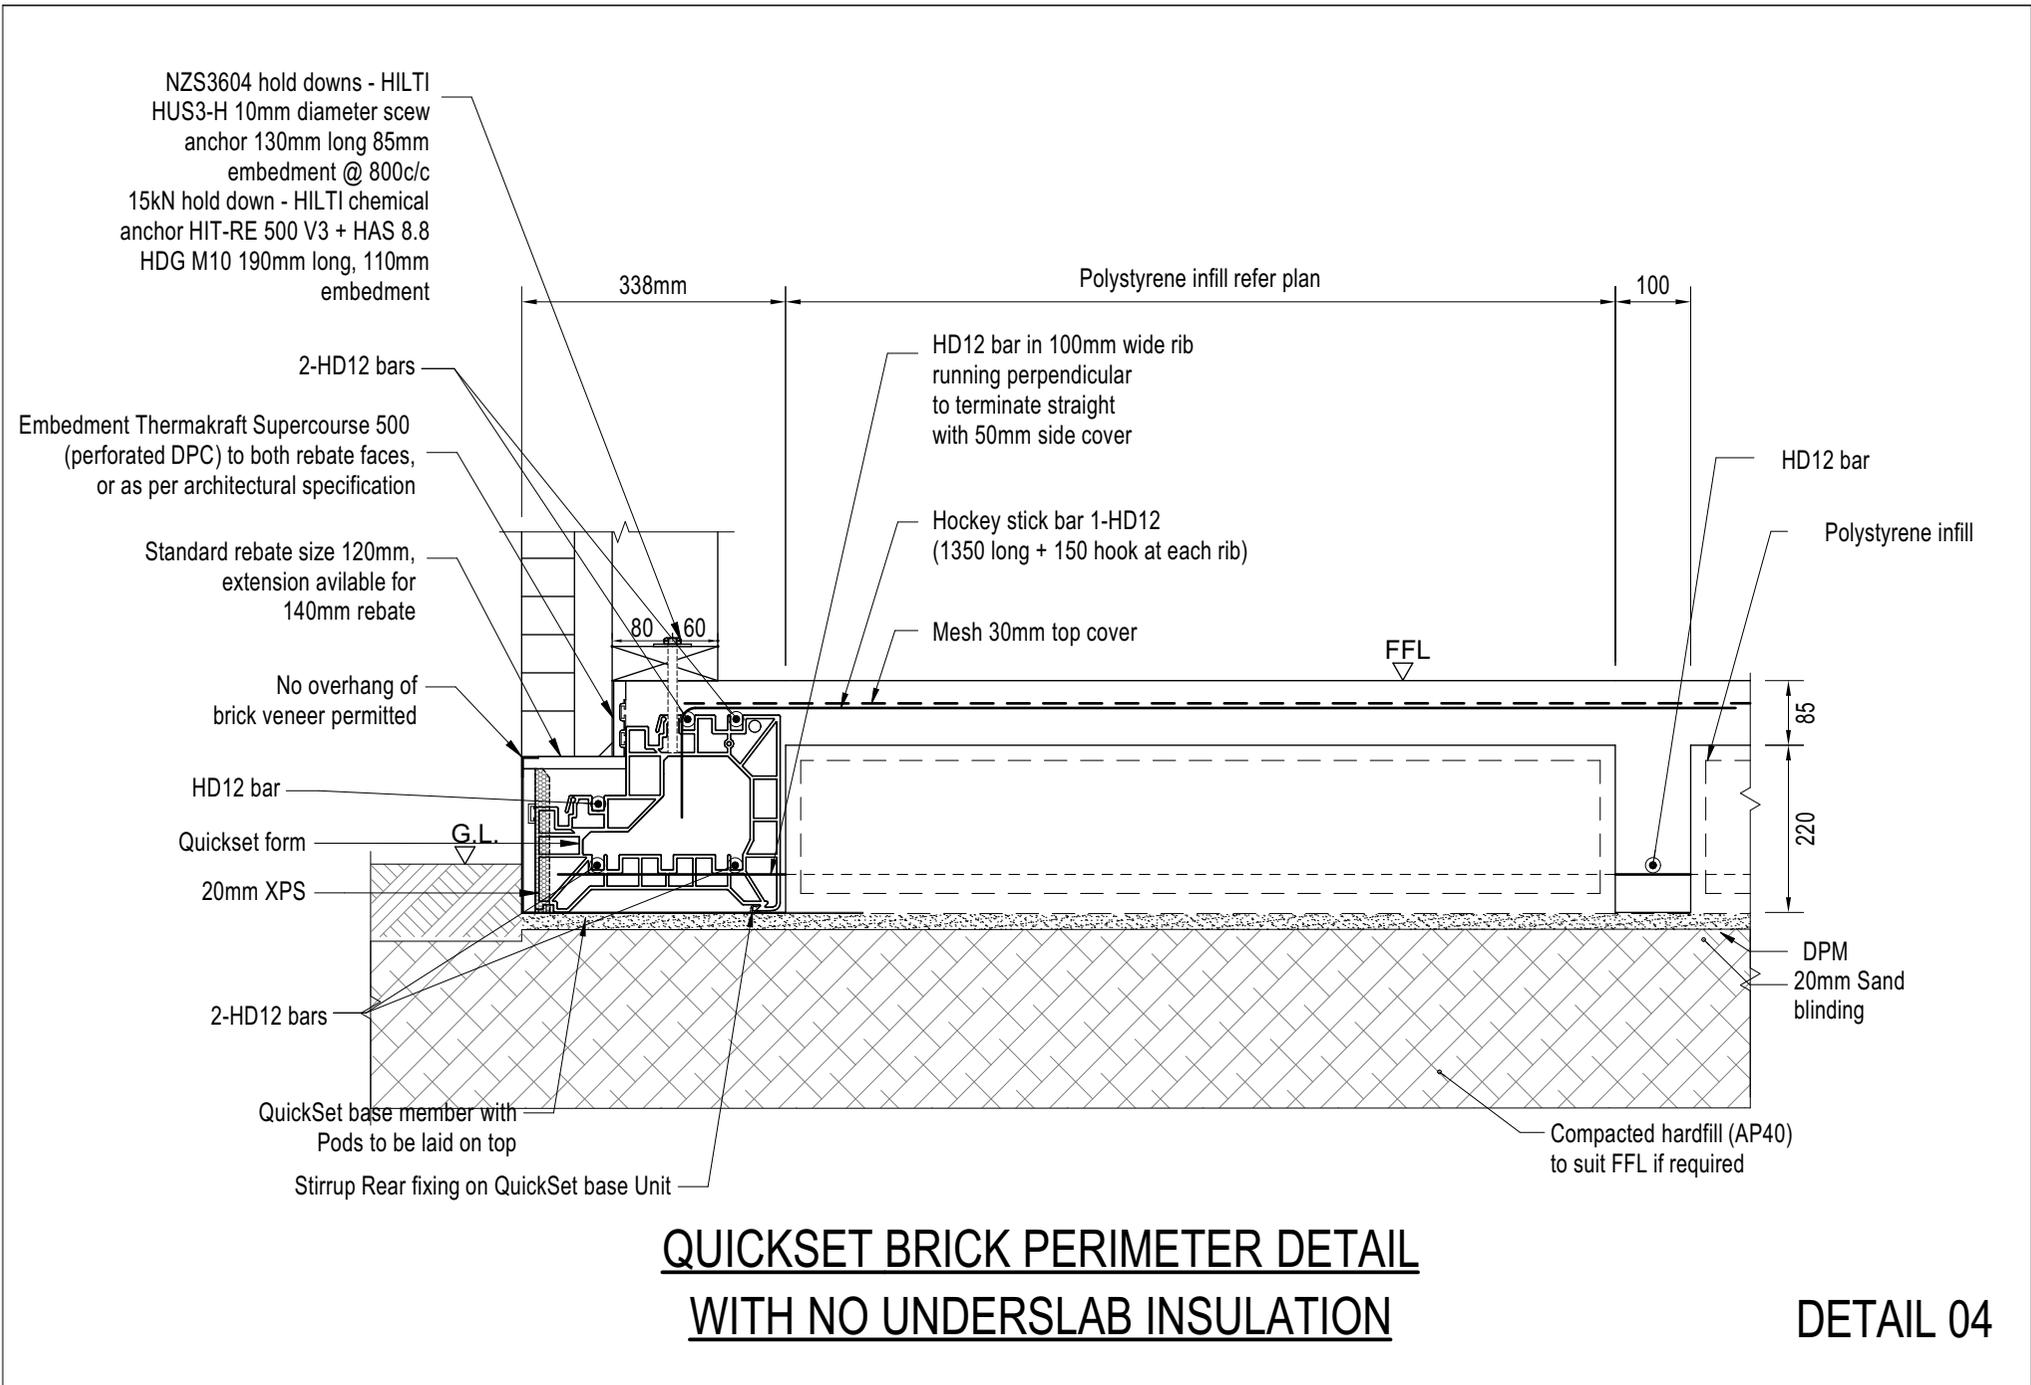

**QUICKSET BRICK PERIMETER DETAIL**  
**WITH NO UNDERSLAB INSULATION**

**DETAIL 04**


NZS3604 hold downs - HILTI  
 HUS3-H 10mm diameter scaw  
 anchor 130mm long 85mm  
 embedment @ 800c/c  
 15kN hold down - HILTI  
 chemical anchor HIT-RE 500  
 V3 + HAS 8.8 HDG M10  
 190mm long, 110mm  
 embedment

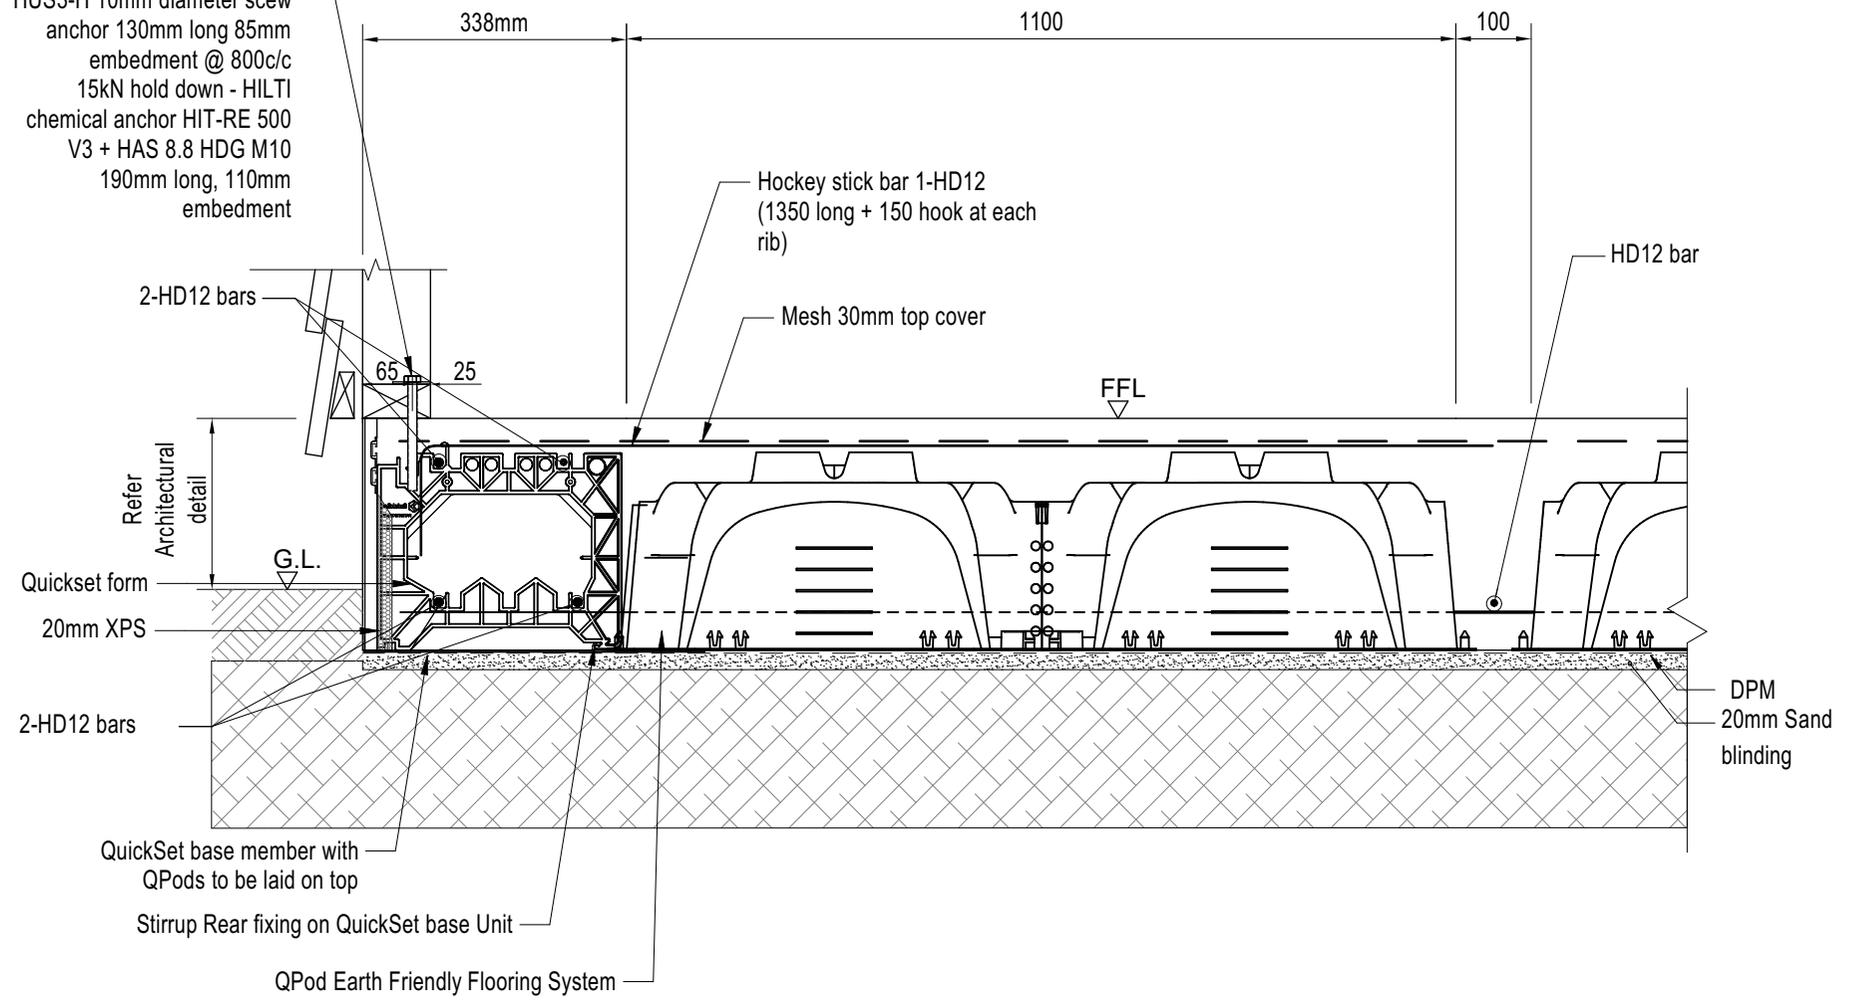

**QUICKSET TIMBER WEATHER BOARD QPod PERIMETER DETAIL**  
**WITH NO UNDERSLAB INSULATION**


**DETAIL 05**

NZS3604 hold downs - HILTI  
 HUS3-H 10mm diameter scrow  
 anchor 130mm long 85mm  
 embedment @ 800c/c  
 15kN hold down - HILTI  
 chemical anchor HIT-RE 500  
 V3 + HAS 8.8 HDG M10  
 190mm long, 110mm  
 embedment

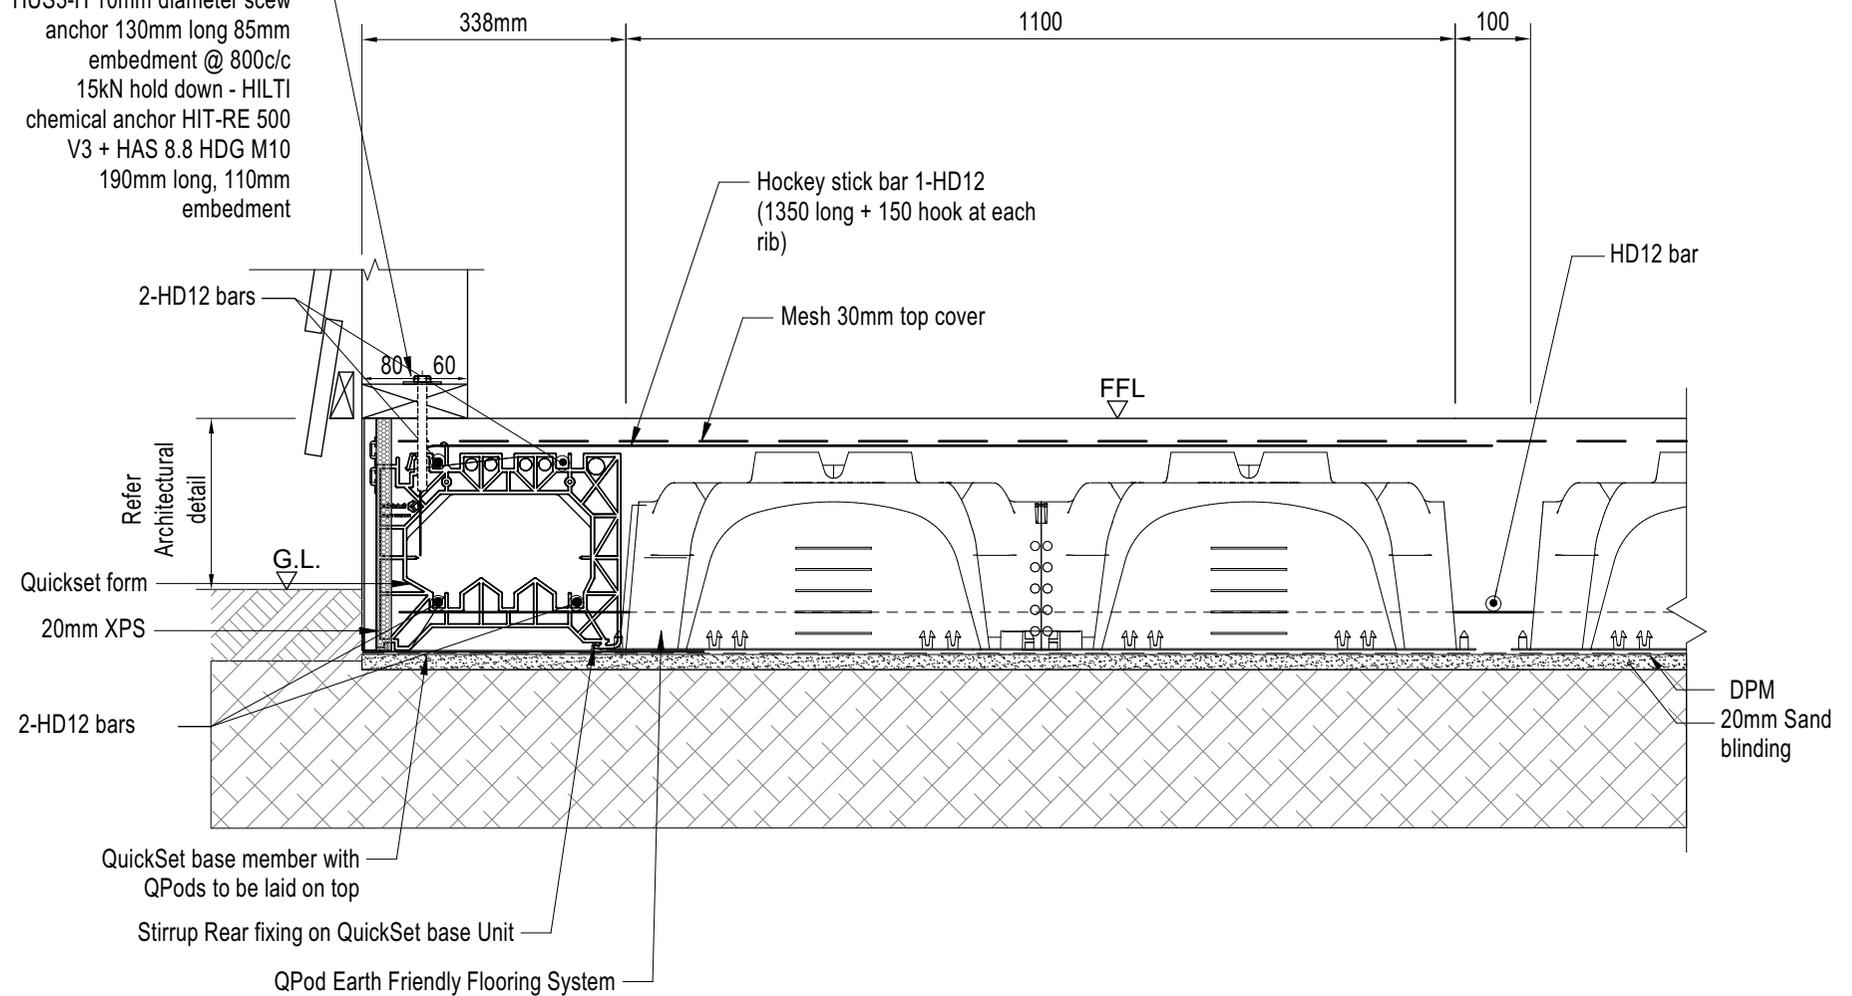


**QUICKSET TIMBER WEATHER BOARD QPod PERIMETER DETAIL**  
**WITH NO UNDERSLAB INSULATION**

**DETAIL 06**

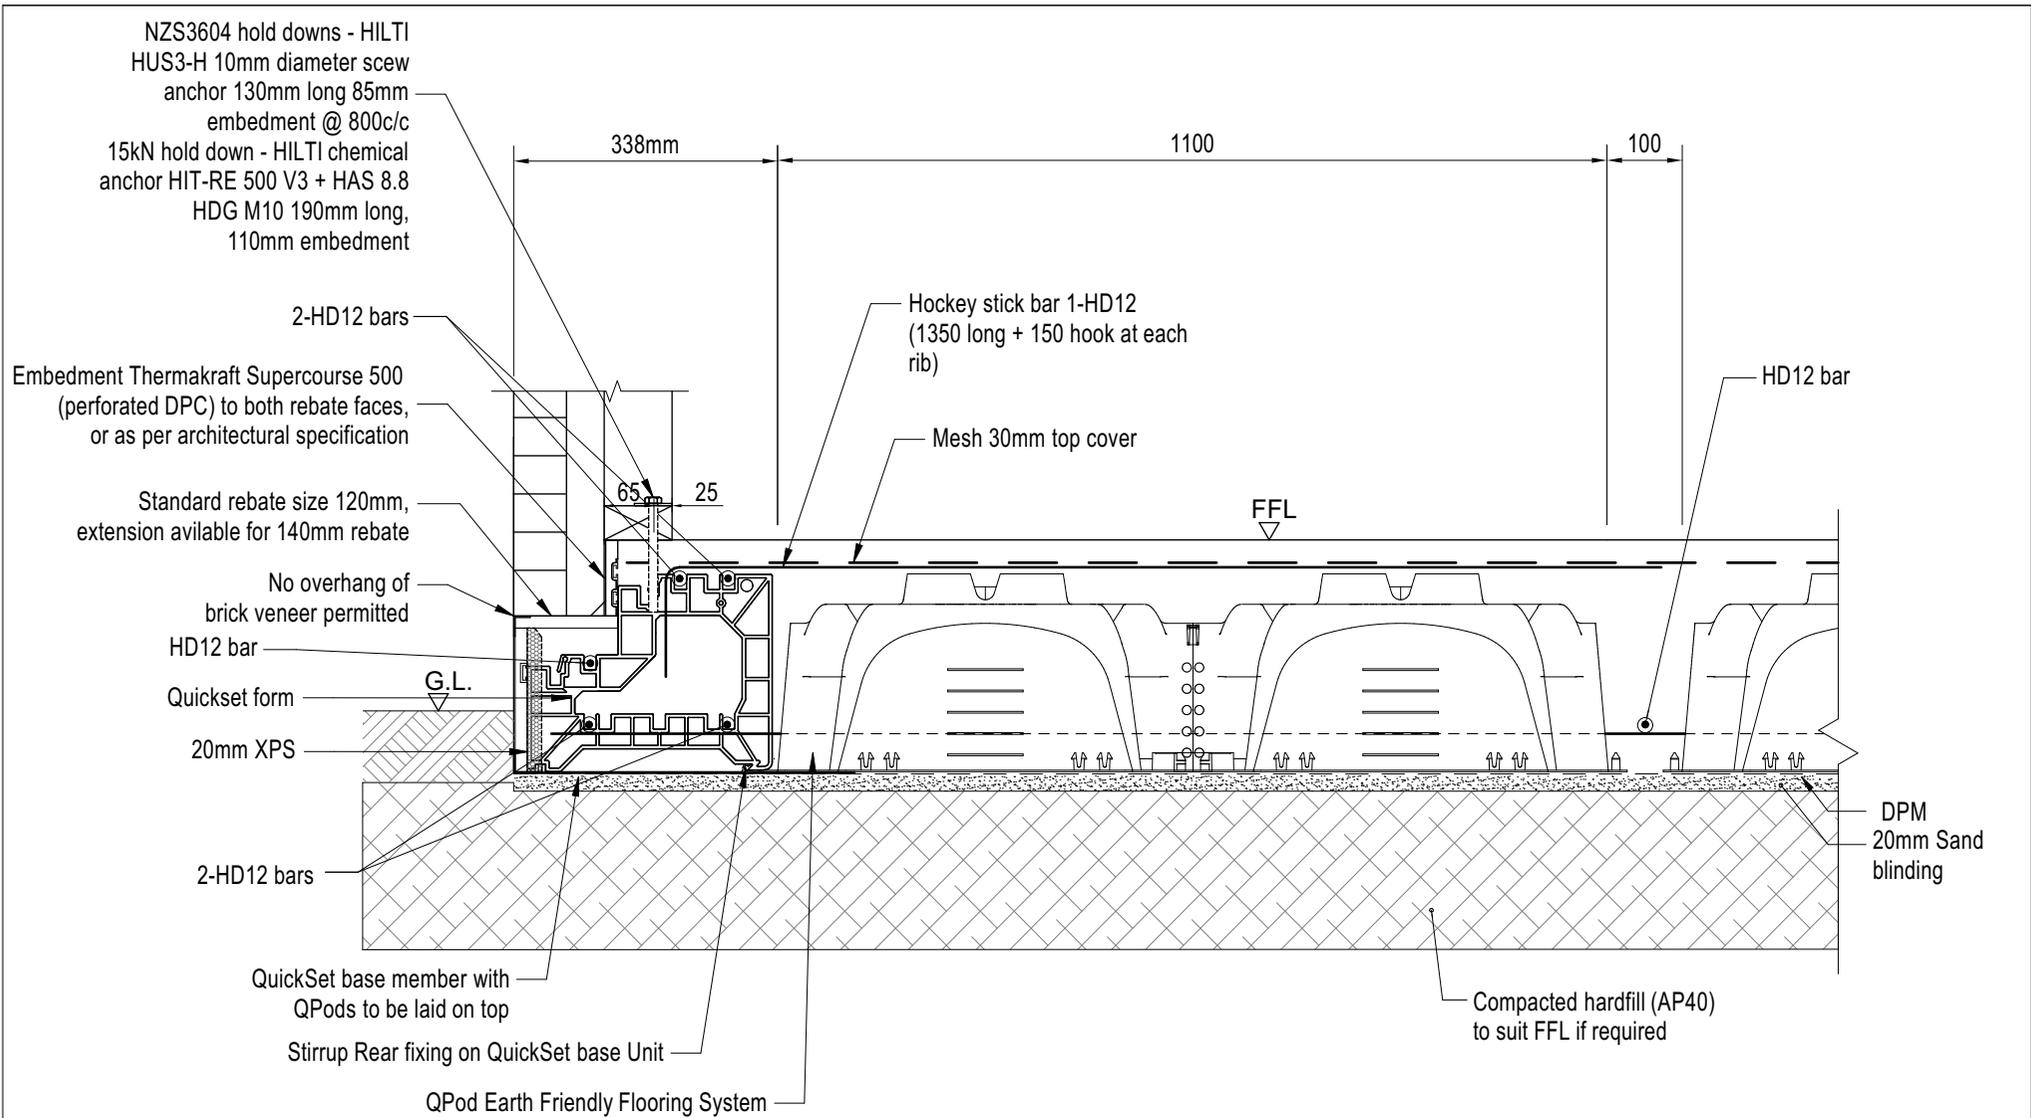

**QUICKSET BRICK QPod PERIMETER DETAIL WITH  
 NO UNDERSLAB INSULATION**

**DETAIL 07**

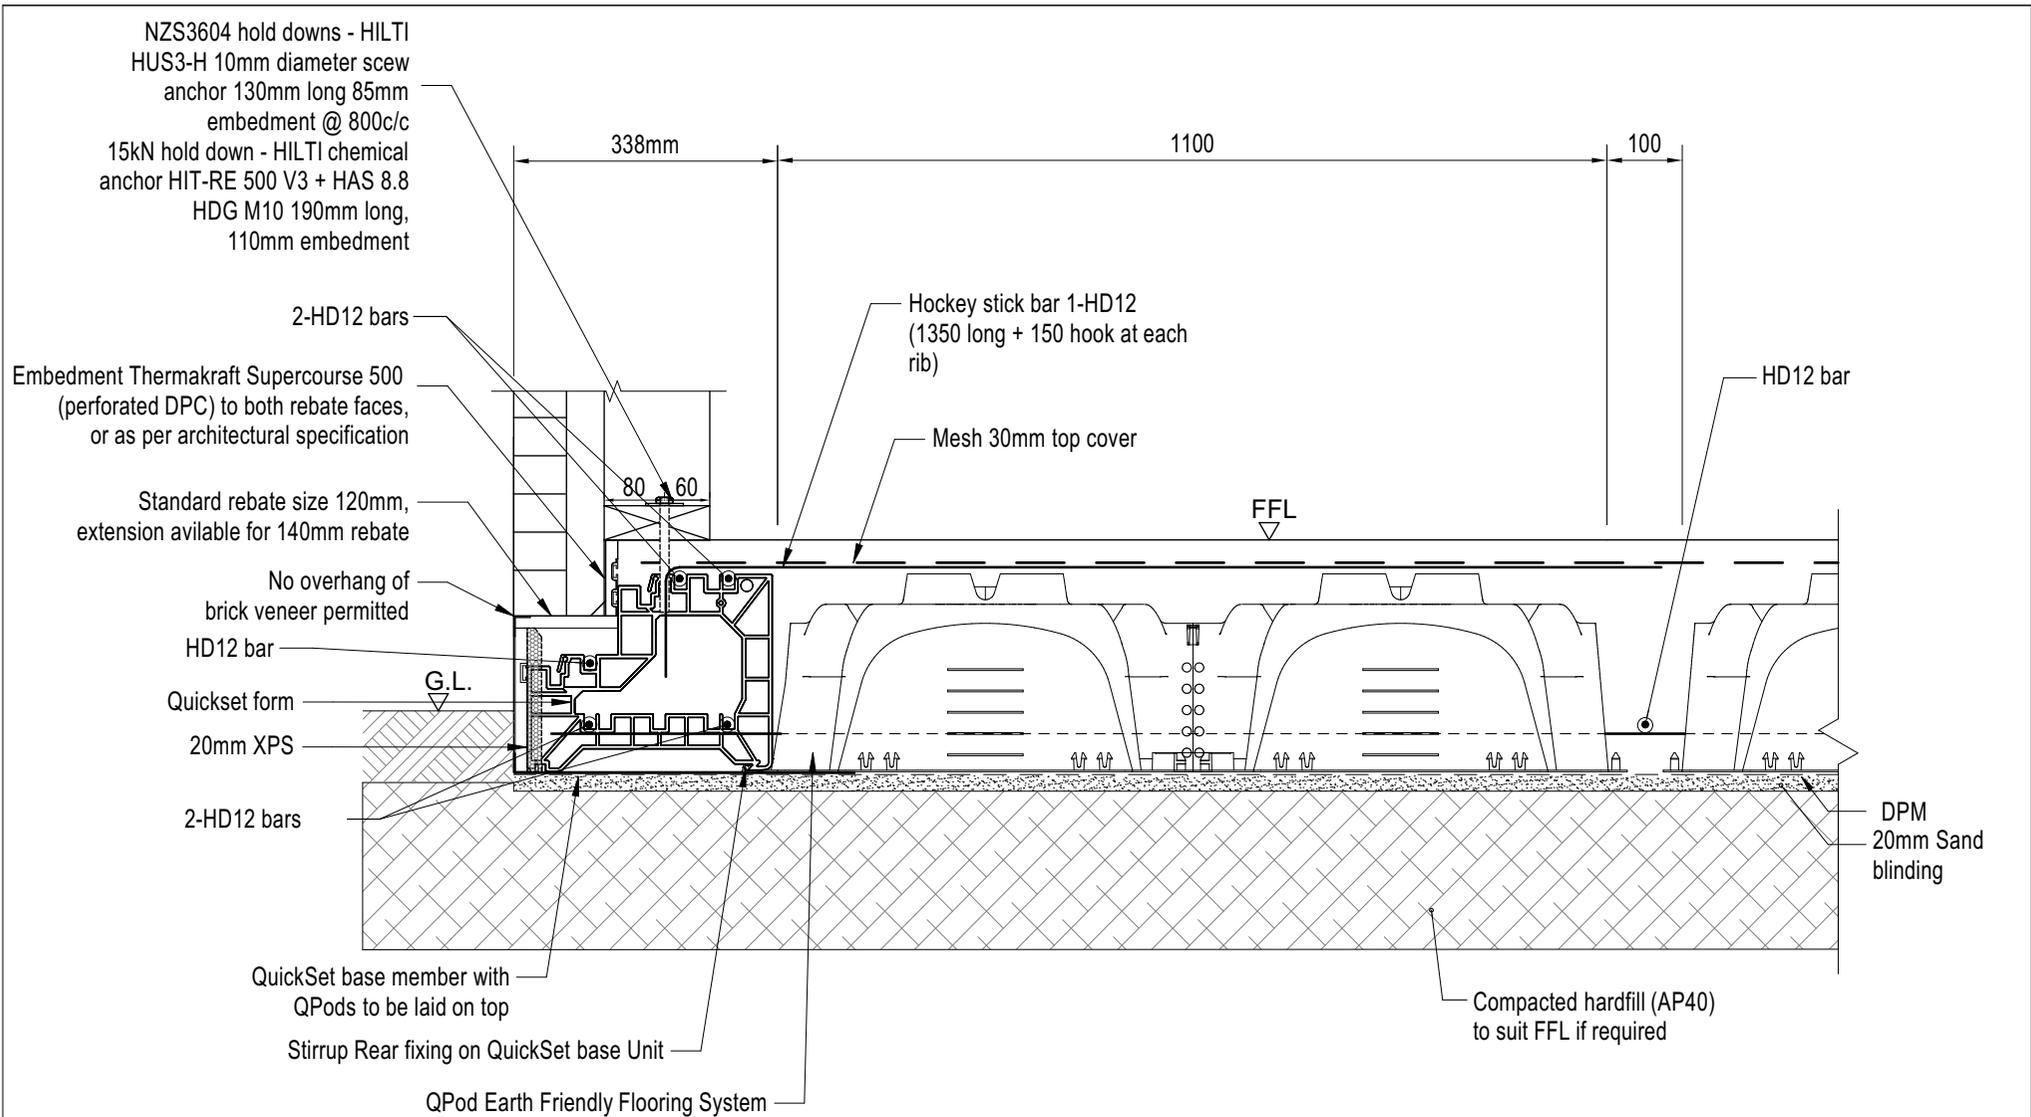

**QUICKSET BRICK QPod PERIMETER DETAIL WITH  
 NO UNDERSLAB INSULATION**

**DETAIL 08**