


Footpath & Cycleway (Typical Design)

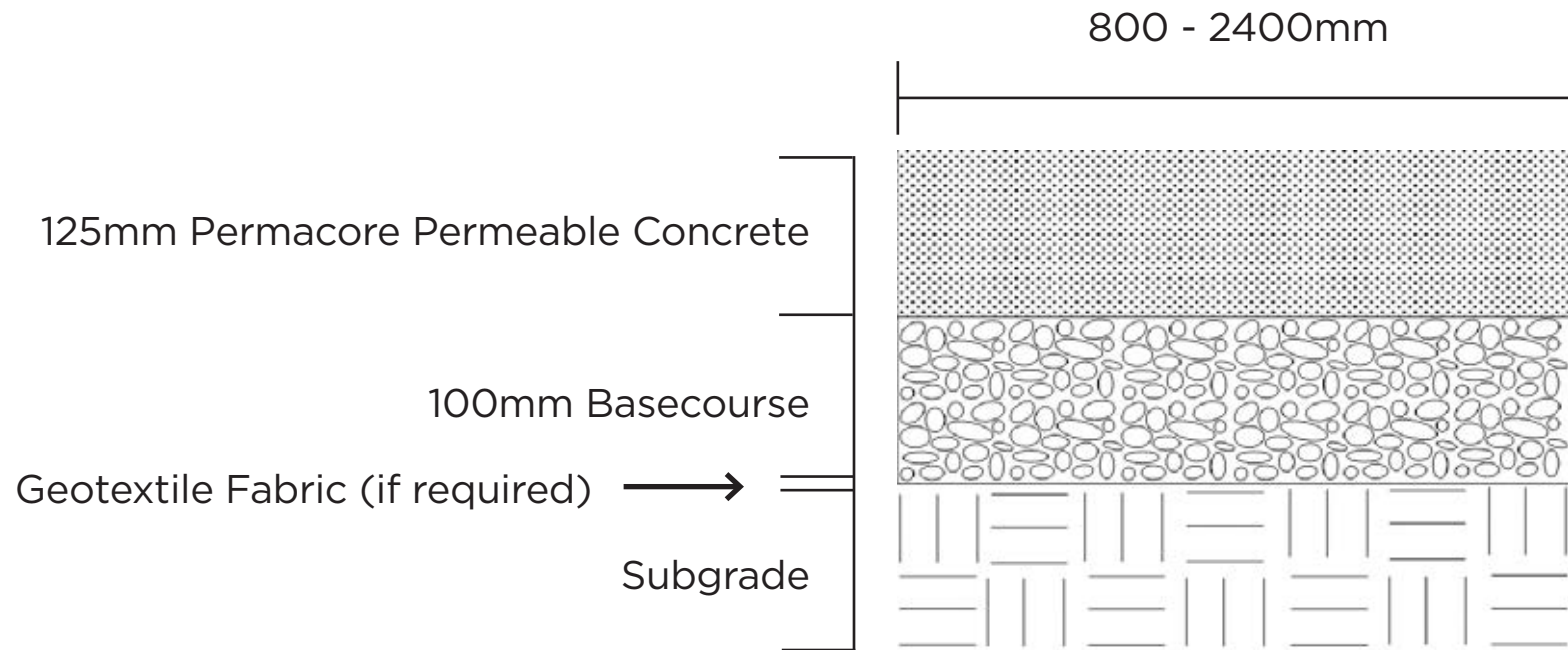

Note: Geotextile Fabric, the filter cloth should be non-woven polypropylene fabric, which allows water to pass through it while preventing sandy fines or clay from migrating from the subgrade up into the basecourse.

Geotextile is recommended for areas prone to liquefaction.